



MERCURISER SERVICE BULLETIN

Section: XII (Bulletins)

Number: 69-14-09

Date : 5/9/69

Power Trim Operation

POWER TRIM OPERATION

(This Article Is Reprinted from a Previous Bulletin, because of the Number of Inquiries We Have Received on Operation of the Power Trim.)


The new panel can be identified by the push button color:

- Red - "UP"
- Red/Green - "UP/OUT"
- White - "IN"

The complete new operation procedure is outlined in the customer's "Operation and Maintenance Manual" which accompanies each unit. Following is a brief operational outline:

TRIMMING BOAT

1. Unit "Out" - press "UP/OUT" button.
2. Unit "In" - press "IN" button.

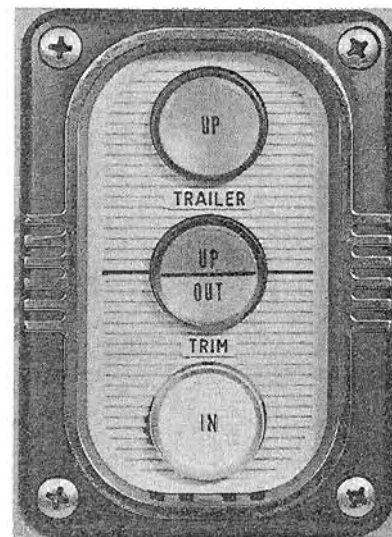

New Power Trim Control Panel

TRAILERING or LAUNCHING BOAT

1. To "Raise" unit - press "UP/OUT" and "UP" buttons at same time.
2. To "Lower" unit - press "IN" button.

If button is held depressed for a period of time after drive unit reaches end of upward travel, an overload cutout switch will open, and pump motor will stop. To prevent cutout from opening, it is recommended that "UP" and "UP/OUT" buttons be released as soon as drive unit reaches the end of upward travel. If cutout should open, do not depress switches for approximately one minute.

After this period of time, cutout will close and unit may be operated.